


## RCL04 Marantec Gate Receiver Wiring Diagram

P/N #74183 RCL04-3101M-01 - 315 MHz

waterproof housing

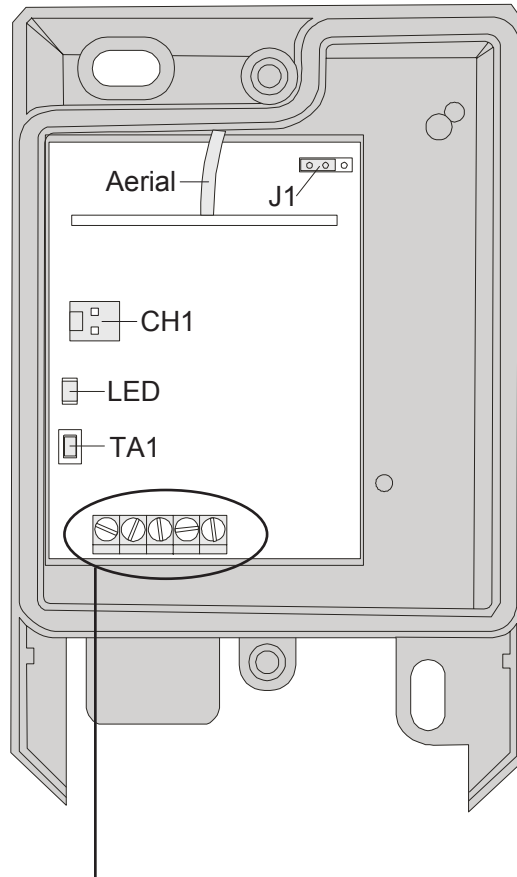

1. Press and Hold TA1 until LED blinks.

2. Press transmitter button LED goes solid.

Receiver is now ready for operation.

Up to ten transmitters can be programmed to operate a single gate receiver.

