


Installation Guide


marantec 
engineered for you

Remote Activation Kit


Remote Activation Kit Content # 158766

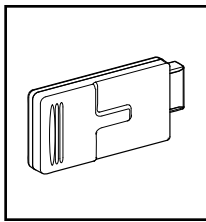

Modular Receiver
315MHz
Model # M16-831
Part # 122667

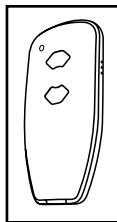

2 Channel Transmitter
Model # 382-315
Part # 122436
Battery included.
Complete with visor clip.

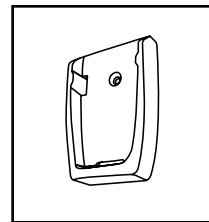



Transmitter Mounting Plate
Model # M16-920
Part # 140419

Installation

VTA Operator

MODULAR RECEIVER INSTALLATION



1. Disconnect the operator from power.
2. Remove the housing (Fig. 1).
3. Connect the modular receiver to terminal XB70 (Fig. 2).
4. Make a hole in the white round sticker located in the power cord holder.
5. Feed the antenna wire through the hole.
6. Connect the Command 108 to terminal XW40.
7. Connect the operator to power.
8. Use Command 108 to program the transmitter. Follow the transmitter programming instructions in the **Transmitter** section.
9. After programming completed, disconnect Command 108 and replace the housing.

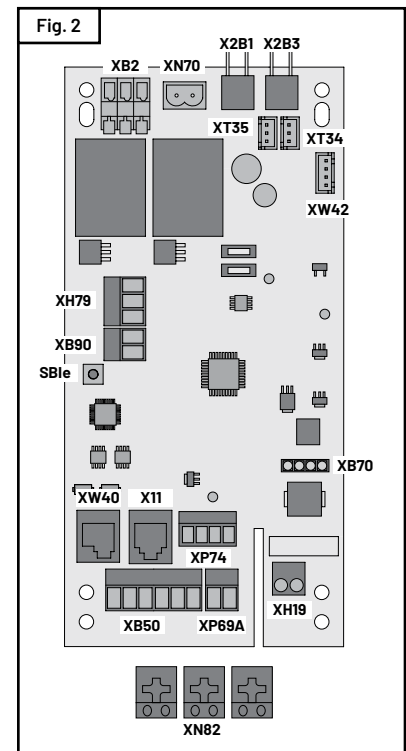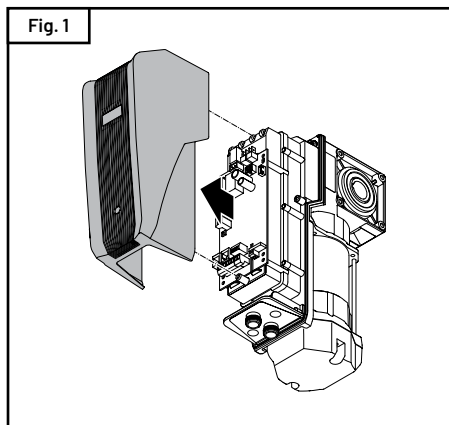

Synergy LC Operator

MODULAR RECEIVER INSTALLATION

- To install modular receiver, refer to Fig. 3 and Fig. 4.

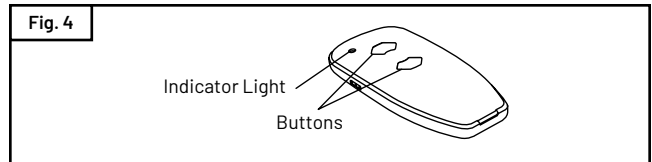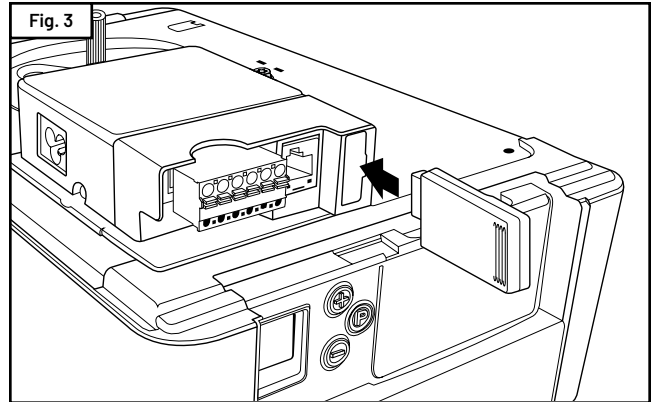

Transmitter

PROGRAM A REMOTE CONTROL (TRANSMITTER)

- To start programming, press and hold the **(P)** button for approximately 5 seconds.
- Once the display timer counter reaches the count of 5, release the **(P)** button.
- The blinking open door icon is displayed on the control panel screen. Press the **(P)** button.



- The blinking close door icon is displayed on the control panel screen. Press the **(P)** button.



- The transmission icon will blink on the control panel display. This indicates the operator is ready to learn the remote control code.
- Press and hold the button on the remote control that you wish to use.
- The transmission icon will change its displayed symbol to a solid icon. This indicates that the remote control code has been successfully learned by operator.
- Press **(P)** button to save remote control code and end the system set up.



WARNING



Danger of injury due to uncontrolled operation of the door!

- Operate the controls or the hand transmitter only when there are no persons or objects in the path of the door.
- Ensure that the controls and the hand transmitter are never used by children or unauthorized persons.
- Ensure that the hand transmitter cannot be operated by accident (in a trouser pocket, for example).

FCC CERTIFIED

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TRANSMITTER MOUNTING

The transmitters can be conveniently mounted inside your car using the visor clip or on the wall using the mounting plate (Fig. 5).

